

### Functional Test Data

Output Bit	Function	Input Bit	Function
2	ENABLE LEDES 0 = NORMAL 1 = DETECTOR & ZM LEDES ENABLED	2	LED ENABLE CONFIRMED 0 = NORMAL 1 = DETECTOR & ZM LEDES ENABLED
1	SELF TEST 0 = NORMAL 1 = TEST ACTIVE	1	SELF TEST CONFIRMED 0 = NORMAL 1 = TEST ACTIVE
0	RESET 0 = NORMAL 1 = RESET ON	0	RESET CONFIRMATION 0 = NORMAL 1 = RESET APPLIED

For further information on protocol bit usage refer to the XP95 Zone Monitor PIN sheet, PP2016.

### Troubleshooting

Before investigating individual units for faults, it is very important to check that the *system* wiring is fault free. Earth faults on a data loop or any ancillary zone wiring may cause communication errors. Many fault conditions are the result of simple wiring errors. Check all connections to the unit and make sure that the correct value resistors are fitted where necessary.

### Fault finding

Problem	Possible Cause
No response or missing	Incorrect address setting Incorrect loop wiring
Fault condition reported	Incorrect zone wiring Capacitor not fitted with active EOL Detector removed Incorrect EOL Incorrectly fitted active EOL
Analogue value unstable	Dual address Loop data fault, data corruption
Constant Alarm	Incorrect wiring Incorrect end-of-line resistor fitted Incompatible control panel software



## XP95 Zone Monitor Installation Guide

### General

The XP95 Zone Monitor, part no 55000-813, is supplied with a backbox for surface mounting. It is also available without a backbox for flush fitting — part no 55000-814. For flush fitting the installer will need to provide a suitable metal box with fixing centres of 120.6mm (UK standard 2-gang accessory box).

**Note: The XP95 Zone Monitor is not designed for outdoor use unless it is mounted in a suitable weatherproof enclosure.**

### Surface Mounting


1. Mount the backbox as required and install all cables for termination. Ensure that earth continuity is maintained.
2. Remove the cover plate (if secured) from the Zone Monitor assembly by inserting the blade of a terminal screwdriver into each of the four securing clips in turn, gently prising the outer edge of the cover plate over the clips underneath. **DO NOT USE EXCESSIVE FORCE.**
3. Terminate all cables.
4. Gently push the completed assembly towards the back box until the mounting holes are aligned and secure with the two mounting screws provided. **DO NOT OVERTIGHTEN.**
5. Set the address of the unit as shown on page 3.
6. Finally, when commissioning is complete, fit the cover plate by placing it in position, observing the correct orientation (LEDs on the PCB must be aligned with viewing holes). Apply pressure to the cover plate until all four clips are holding it in position.

### Flush Mounting

1. Secure a suitable metal back box (30mm minimum depth) in position and install all cables for termination. Ensure that earth continuity is maintained.
2. Follow steps 2 to 6 as above.

## Wiring Details

All wiring terminals will accept solid or stranded cables up to 2.5mm<sup>2</sup>

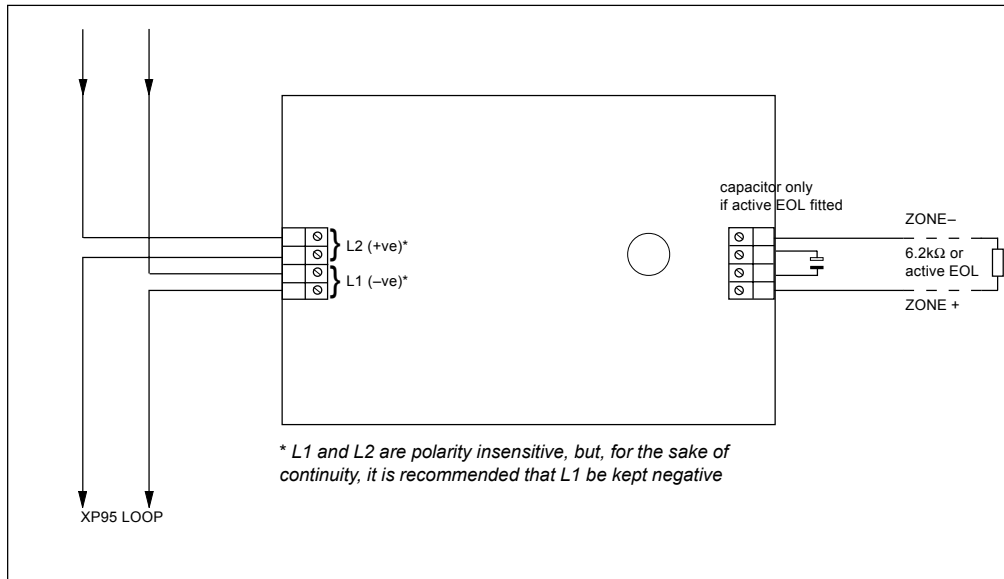

## Current consumption, loop, max @ 24V

quiescent	4mA plus detector load
alarm	11mA
alarm with detector LED enabled	18mA

For a full technical specification of the Zone Monitor, please refer to the XP95 Zone Monitor PIN Sheet, PP 2016.

## Operation with I.S. Detectors

The XP95 Zone Monitor can be used to power a zone of conventional I.S. detectors through a 28V/300W safety barrier. When used in this configuration the wire link adjacent to the LED must be cut to provide correct short-circuit monitoring.

## Operation with Active EOL Unit

The XP95 Zone Monitor can be used with active end-of-line units that operate with diode bases and require a capacitor connected to the zone output. The capacitor should not exceed 50µF (nominal) and should be connected as shown.

## Address Setting

The address of the Zone Monitor is set using the seven-segment DIL switch. Each segment of the switch must be set to "0" (ON) or "1" (OFF), using a small screwdriver or similar tool. A complete list of address settings is shown below.

addr	DIL switch setting 1234567	addr	DIL switch setting 1234567	addr	DIL switch setting 1234567	addr	DIL switch setting 1234567	addr	DIL switch setting 1234567
1	1000000	11	1101000	21	1010100	31	1111100	41	1001010
2	0100000	12	0011000	22	0110100	32	0000010	42	0101010
3	1100000	13	1011000	23	1110100	33	1000010	43	1101010
4	0010000	14	0111000	24	0001100	34	0100010	44	0011010
5	1010000	15	1111000	25	1001100	35	1100010	45	1011010
6	0110000	16	0000100	26	0101100	36	0010010	46	0111010
7	1110000	17	1000100	27	1101100	37	1010010	47	1111010
8	0001000	18	0100100	28	0011100	38	0110010	48	0000110
9	1001000	19	1100100	29	1011100	39	1110010	49	1000110
10	0101000	20	0010100	30	0111100	40	0001010	50	0100110
51	1100110	61	1011110	71	1110001	81	1000101	91	1101101
52	0010110	62	0111110	72	0001001	82	0100101	92	0011101
53	1010110	63	1111110	73	1001001	83	1100101	93	1011101
54	0110110	64	0000001	74	0101001	84	0010101	94	0111101
55	1110110	65	1000001	75	1101001	85	1010101	95	1111101
56	0001110	66	0100001	76	0011001	86	0110101	96	0000011
57	1001110	67	1100001	77	1011001	87	1110101	97	1000011
58	0101110	68	0010001	78	0111001	88	0001101	98	0100011
59	1101110	69	1010001	79	1111001	89	1001101	99	1100011
60	0011110	70	0110001	80	0000101	90	0101101	100	0010011
101	1010011	111	1111011	121	1001111				
102	0110011	112	0000111	122	0101111				
103	1110011	113	1000111	123	1101111				
104	0001011	114	0100111	124	0011111				
105	1001011	115	1100111	125	1011111				
106	0101011	116	0010111	126	0111111				
107	1101011	117	1010111						
108	0011011	118	0110111						
109	1011011	119	1110111						
110	0111011	120	0001111						

## Commissioning

It is important that the XP95 Zone Monitor be fully tested after installation. An XP95 Test Set, part no 55000-870, may be used to carry out functional testing of individual units. It can also be used to perform data integrity tests of an entire system.

## LED Indicators

⊙ Alarm Illuminated red when conventional detector zone is in alarm